



Copy to Multiple Files – Feature Overview

This feature, **only available for Professional Licenses**, enables you to copy **parameters, maps, and supported DTCs** from a **source document** to one or more **destination documents**.

⚠ WARNING: Destination documents will be **overwritten**. It is strongly recommended to **enable** the following options:

- *Create backup files*
- *Add date and time suffixes to backups*

Menu Commands

These commands are available under the **Files** menu:

Command	Shortcut	Description
Enter 'Copy to multiple files' mode...	CTRL + M	Activates copy mode. The left tree reorganizes to prioritize the Axes group. Node highlighting shows differences from the stock version.
Exit 'Copy to multiple files' mode	CTRL + SHIFT + M	Returns to normal editing mode.
Add destination files...	INS	Adds one or more destination documents.
Select all destination files	CTRL + A	Selects all items in the destination file list.
Remove selected destination files	DEL	Removes selected items from the destination file list.
Copy to multiple files...	SHIFT + INS	Starts the copy process after confirmation and log file path selection.

Copy Mode Interface

Upon entering **Copy to multiple files** mode:

- The **left panel** shows a modified tree structure with:
 - The **Axes group** listed first.
 - Checkbox options for each node.
 - **Highlighting** to indicate differences from the stock version.
- The **right panel** includes:



www.tomelectronics.it
#1 in Dodge Cummins Performance

- Tree and output configuration options.
 - Export settings for .ecm and .rtg files.
 - A list of destination files.
 - A counter tracking processing progress.
-

Export & Log Information

- **Backup files** are saved in the same location as the destination files.
 - **Exported files** (.ecm, .rtg) are placed in subfolders under each destination's directory:
 - /Custom/ECM/
 - /Custom/RTG/
 - The **log file** uses the following markers:
 - (r) – Report
 - (i) – Information
 - (!) – Warning
 - (x) – Error
 - (d) – Detail
-

Step-by-Step Instructions

1. Open the **source document** (with desired modifications).
 2. Enter **Copy to multiple files** mode (CTRL + M).
 3. Add one or more **destination documents**.
 4. *(Optional)* Enable **"Show only highlighted objects from selected comparison."*
 5. Select the objects in the tree that you want to copy.
 6. Configure **output settings**:
 - Ensure "**Create backup files**" and "**Add date and time suffixes to backups**" are checked.
 7. *(Optional)* Configure **.ecm/.rtg export options**.
 8. Initiate the **copy/export process** (SHIFT + INS) and select the log file location.
 9. Monitor the **progress bar** at the bottom-right.
 10. After completion, open the log file and **review all (!) warnings and (x) errors**.
-



www.tomelectronics.it
#1 in Dodge Cummins Performance

Tips & Recommendations

- You can select destination files from a **single folder** or **multiple subfolders** under the same root.
- For convenience, save the **log file** in the same location as the destination documents or the shared root folder.
- Always **enable backup options** to preserve original files.
- After processing, thoroughly **check the log file**—especially for lines starting with (!) and (x).